



10-Speed Cassette User Manual

Compatibility

- Freehub Body: Shimano compatible driver body. NOT compatible with Shimano Dura-Ace deep spline 10-speed cassette bodies.
- Williams EVORA cassettes are designed to use with Shimano and SRAM shifter/Derailleurs.
- Chains: Shimano or SRAM compatible 10-speed chains.

Installation

- Remove the transportation lock.
- Push the cassette from the holder.
- Install spacer onto freehub body.
- Install the cassette following the same pattern on the holder.
- Use locking tool to tighten lockring 30 to 50 N-m (261 – 434 in. lbs).

Warning

- Secure the wheels before riding the bicycle. If the wheels are loose in any way, they may come off the bike and cause serious injury.

Note

- Periodically wash the sprockets in a neutral detergent and then lubricate them again. Cleaning the chain with neutral detergent will extend the life of the chain and cassette.
- If the chain keeps coming off the sprockets during use, replace the sprockets and chain.